


MC110 - Quick Start Guide - page 1

1

Open the carton box

- Carefully remove the printer and remove plastic.
- Remove accessories package.
- Retain and store all packing materials for future use. Any warranty returns should be sent in original packaging.

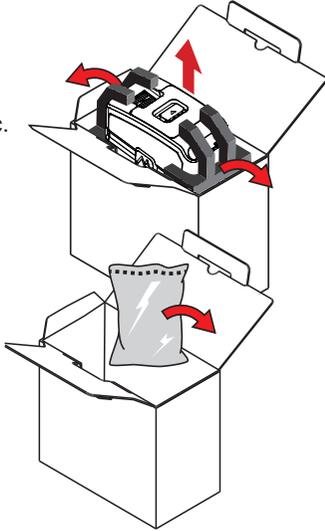

2

Contents check list

1. MC110 printer

Accessories package:

2. Power supply
3. Power cord
4. USB cable
5. Cleaning card
6. Cleaning swab




2



3




4

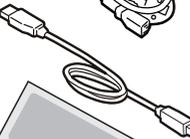

5



6

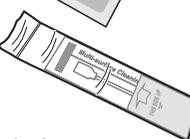


Please make sure that all the components and accessories are included in the box. If there are missing or damaged items, please contact your dealer for assistance.

3

Remove card feeder packaging



- Open the front card feeder door and remove the protective cardboard.

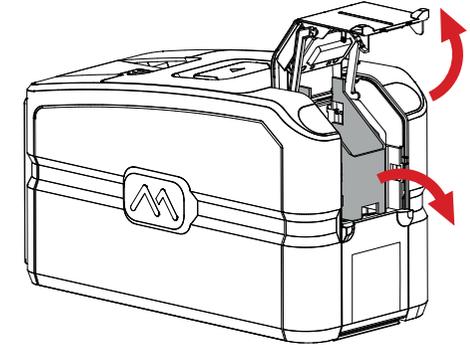

4

Power your printer

- Connect the AC power supply.
- Power ON the printer.

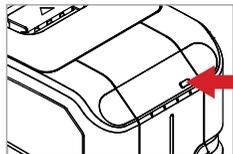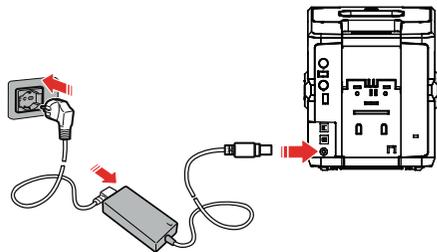

Visit:

www.maticagroup.com/install

Or scan the QR code below using your computer's webcam to the installation page and follow the online instructions.




Download and install driver

- Follow the online step-by-step guide to download and install the printer driver.



Connect USB cable

- Connect the printer to the computer using the USB cable when instructed during driver installation.

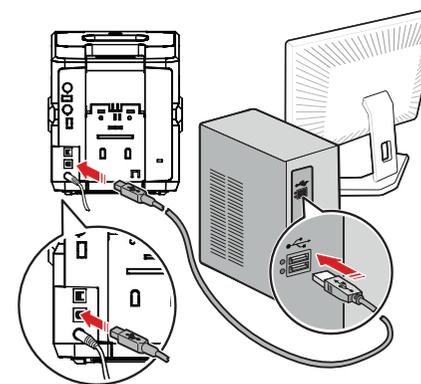

5

Register your printer:

www.maticagroup.com/register

- Validate your warranty
- Receive notifications of driver and firmware updates.
- Gain easy access to support.

Claim your FREE software:

CardExchange
Producer
Lite edition



Register: via mobile

- Scan the QR code to the registration page and follow the online instructions.




6

Installing the ribbon into printer


Open printer

- Push the top cover lever away from you and lift the top cover.

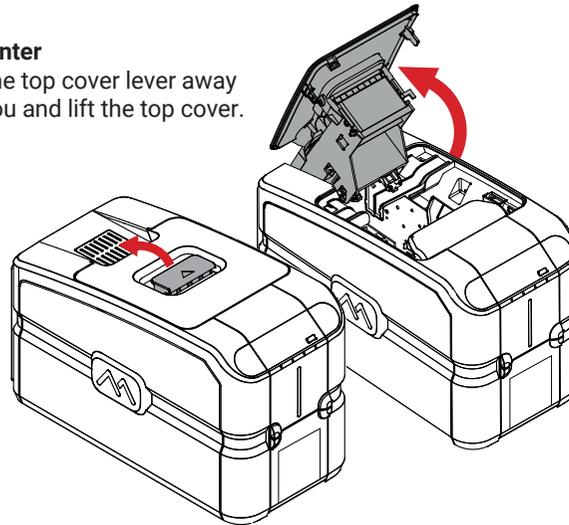

Insert ribbon into printer


- Observe the ribbon guides to insert the ribbon.
- The channel for the red reel is red.
- The channel for the gray reel is dark gray.
- Insert the red reel (1.) into the red channel as shown, with the widest diameter end on the right-hand side.
- Insert/slide the gray reel (2.) into the gray channel

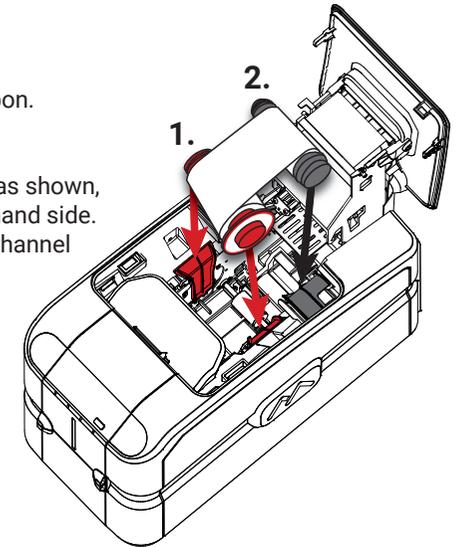

7


Loading cards

- Open front card door and insert cards according to the card orientation sticker inside.

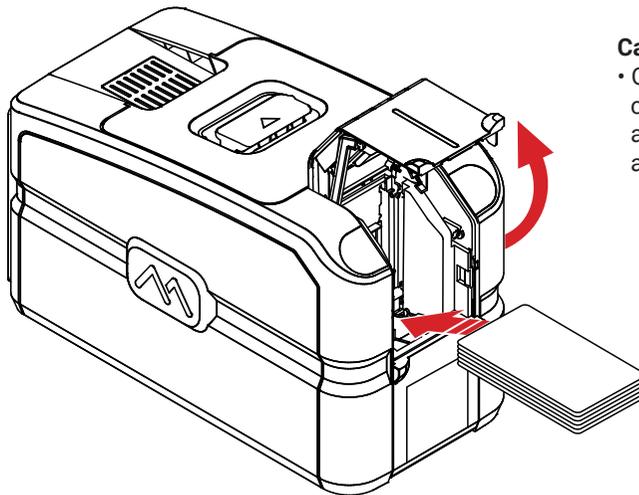

Card thickness adjustment

- Open the top cover, adjust the card thickness lever to the appropriate card thickness and close the top cover.

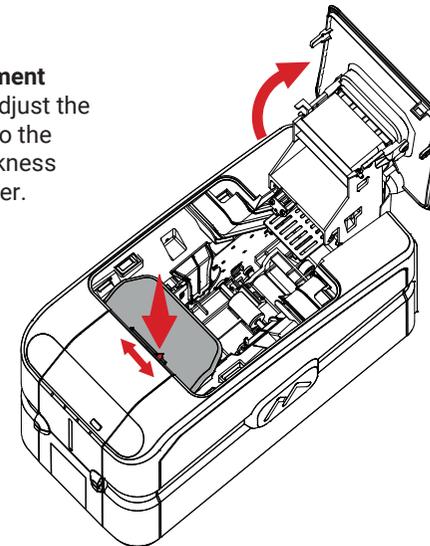

8

You are now ready to start printing!

